

I.C.U.

INTEGRATED CAMCORDER UNIT 1.0

TACTICAM

USER'S MANUAL

Thank you for buying the I.C.U. (INTEGRATED CAMCORDER UNIT), the first action camera specially designed for Airsoft players.

Always respect the following instructions and precautions, and observe strict safety rules.
HAVE FUN!! PLAY RESPONSIBLY!!

WARNINGS

- **Always use the camera in compliance with the laws and regulations of the country or region where you use the camera.**
- Do not use the camera in very hot, cold, dusty or damp environment.
- Do not put the camera under water.
- The camera requires a Micro SD Card to work (not included). Always insert and remove the Micro SD Card when the camera is off.
- Battery's lifespan may vary according to the environment. Colder temperatures may drain the battery quicker.
- PLAN BETA will not take any responsibility for data loss.
- PLAN BETA will not take any responsibility for the content of the footage, how it will be used, and any direct or indirect consequences.
- Do not take the camera apart for any reasons. For any questions, contact your dealer first.
- Do not use the camera in very dark or strong light. Image quality will be poor or it may damage the camera's lens.


WARRANTY AND LIMITATIONS

The I.C.U. camera enjoys a worldwide limited warranty by PLAN BETA. In case of questions or problems, always contact your dealer.

Our warranty does not cover damage malfunctions or service failures caused by:

- Improper or rough use of the camera
- Illegal use of the camera
- Non-observance of this manual's instructions and warnings
- Attempt to dismantle or modify the camera.
- Use of the camera for a purpose other than leisure practice of Airsoft
- Attachment of the camera to any device not approved by PLAN BETA

OVERVIEW

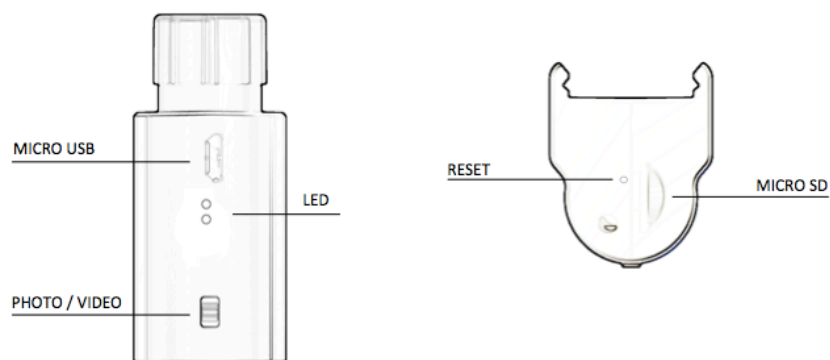

INSTRUCTIONS

1. How to install the I.C.U. camera on the rail

The I.C.U. camera can be installed on all the Picatinny standard rails.

Find the right position for your camera, untighten or tighten the screws as needed.

If after tightening the screws, the camera is not holding firmly to the rail, you may not have found the right spot on your rail, or your rail is not a Picatinny standard rail.

In the latter case, you may decide to use double-sided tape or other attachment mode. Please note this will be your only responsibility.

2. How to untighten / tighten the screws

Use a Phillips screwdriver. Always operate gently to avoid breaking the camera's casing, or damaging the screws' heads.

Generally, slight untightening/tightening is enough (360°).

Never take out the screws completely.

3. How to insert and remove the MICRO SD card

IMPORTANT: The MICRO SD card must be installed and removed only when the camera is powered off.

NEVER INSERT OR REMOVE THE SD CARD WHEN THE CAMERA IS ON.

By doing that, you might damage, the camera, the SD card and/or the files in the Card.

Always use a MICRO SD card, preferably from well-known brands.

Insert the MICRO SD card in the rear slot by pushing it in gently till you hear "click".

To remove the SD card, push it in gently till you hear "click" and release. The SD card will be ejected.

You can now remove it.

For the general use your MICRO SD card, please refer to its operating instructions.

4. How to switch on/off the camera

Press the remote button for 1 to 2 seconds (till the green LED goes from dimmed to full light), then release. The green LED indicator should be ON permanently.

Note: if you switch on the camera without an SD card inside, the red LED will start flashing for 2 seconds and the camera will turn off automatically.

Insert a MICRO SD card and repeat.

REMEMBER TO INSERT OR REMOVE THE SD CARD ONLY WHEN THE CAMERA IS OFF

To switch off the camera, press the remote button for 1 to 2 seconds till both LED flash, and release the button. The indicators should turn off. The camera is OFF.

5. How to select the Photo/Video modes

Use the selector located at the back of the camera.

Forward position: Video

Backward position: Photo

6. How to record a video

If the following conditions are all met:

- a. the camera has an SD card inserted,
- b. the camera is switched on,
- c. the selector is on Video Mode,

you can now record a video by briefly pressing the remote button.

Don't keep pressing the remote button during the video recording.

During the video recording, the green LED should blink.

To stop the video recording, press the remote button again. The green LED will stop blinking and will be ON permanently again.

7. How to take a photo

If the following conditions are all met:

- a. the camera has an SD card inserted,
- b. the camera is switched on,
- c. the selector is on Photo Mode,

you can now take a photo by briefly pressing the remote button.

Every time you will press the remote button, a photo will be taken.

8. How to add on filters (not included)

The I.C.U camera can accept filters.

For better results and safe operation, always use the I.C.U. filters.

Gently remove the front cap of the camera, by pulling it forward.

Place the filter of your choice on top of the lens compartment.

Do not touch the lens with your fingers.

Place the front cap back on, by pushing it gently all the way backwards.

9. When to charge the camera

The camera's battery's capacity allows approximately an hour of video recording.

When the battery is nearly empty, both green and red LED indicators will blink.

This means it is time to recharge your camera.

Don't let the battery get totally empty, it might cause fatal damage to the battery or the camera.

10. How to charge the camera

Switch off the camera.

Plug the USB cable to the camera's micro-USB slot.

Plug the USB cable to a reliable USB power source.

The red LED indicator will blink during the charging time

When the battery is fully charged, the green LED indicator will be on and you can unplug the cable from the USB source first, then from the camera.

Time needed to charge the battery fully depends on the power source. It is approximately one hour.

11. Reset button

In case of trouble, or if the camera doesn't respond properly, press the reset button at the back of the camera.

Use a paper clip or a ballpoint pen and press gently for a second, then release.

12. Troubleshooting

In case of malfunction, don't try to open or fix the camera by yourself.

Switch the camera off for 2 minutes. When you switch it back on, if the problem is still there, contact your dealer.

FAQ

QA: It does not record, what can I do?

A1. Make sure your camera is well charged and powered on

A2. Make sure the Micro SD card is usable with the camera and properly inserted in the slot

A3. Replace the SD card if need be.

A4. Reset the camera

QB: The remote control is not working, what can I do?

B1. Make sure your camera is well charged.

When you press the remote control, the LED indicator should go green.

QC: The camera cannot be charged, what should I do?

C1. Try another USB cable or another charger

C2. Check your power source.

C3. Reset the camera.

QD: How do I know the power is low?

D1. Both indicators greens and red flashes quickly. Be aware that the camera will turn off soon after the warning.